



DISCHARGE PIPING W/ AUTOMATIC FLOW VALVE

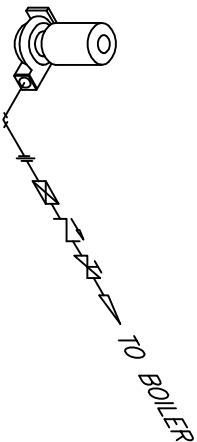


If centrifugal feed pump is operating at 75 PSIG or greater a Automatic Flow Valve typically is utilized.

PIPING BEYOND THIS BREAK IS FOR TYPICAL ILLUSTRATION ONLY AND IS NOT INTENDED TO BE USED FOR INSTALLATION DETAIL. INSTALLATION DRAWINGS MUST BE PREPARED BY A PROFESSIONAL FAMILIAR WITH THE EQUIPMENT AND ITS INTENDED USE TO MEET ALL LOCAL, STATE & FEDERAL CODES, RULES & REGULATIONS.

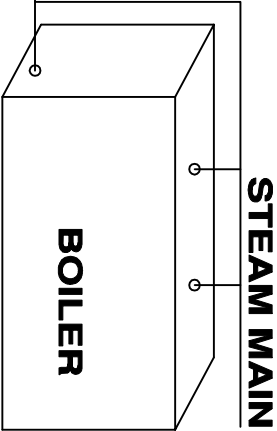

LEGEND

- ✕ BALANCING VALVE
- ✕ GATE VALVE
- ⌞ CHECK VALVE
- ⌞ Y-STRAINER
- ⌞ UNION
- ✕ AUTOMATIC FLOW VALVE
- Y AIR GAP

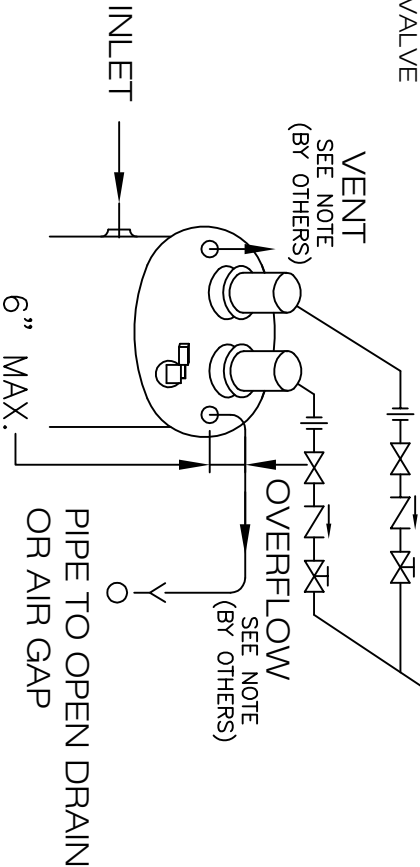

NOTES:

INSTALL FULL SIZE (MINIMUM SIZE) VENT TO ATMOSPHERE.
INSTALL FULL SIZE (MINIMUM SIZE) OVERFLOW TO AIR-GAP OR OPEN DRAIN.
VENT PIPING DETAIL MUST BE DESIGNED AND INSTALLED BY A PROFESSIONAL LICENSED & REGISTERED AS REQUIRED FAMILIAR WITH EQUIPMENT AND ITS INTENDED USE TO MEET ALL LOCAL, STATE AND FEDERAL CODES RULES AND REGULATIONS.

SHIPCO®
SPUMPS

MANUFACTURED BY
SHIPPENSBURG PUMP COMPANY INC.
P.O. Box 279 Shippensburg, Pa. 17257
PHONE 717 532-7321 / FAX 717 532-7704

WWW.SHIPCO PUMPS.COM
SHIPCO® IS A REGISTERED TRADEMARK OF SHIPPENSBURG PUMP CO., INC.

Typical Piping Diagram
Underground Unit
Centrifugal Pumps

DRAWN BY J.S.	DATE 6/04	REVISION .0
PIPING DIAGRAM		
30036		
Section DUMC Page 0900		